


REVBOX
HEART RATE MONITOR
INSTRUCTION
MANUAL

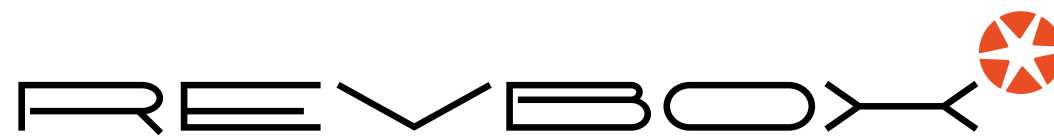

TRAIN • EVOLVE • SUCCEED



WELCOME TO THE REVBOX COMMUNITY...

Congratulations on the purchase of your new Revbox Heart Rate Monitor - This heart rate monitor will enable you to use all the functions from our Revbox Power App, which can be downloaded from Google Play as an Android version. In the near future there will be an IOS version from iTunes.

IN THE BOX...

**Your Revbox Heart Rate Monitor
will come with the following:**

1. Revbox Heart Rate Monitor (Bluetooth and ANT+ capable)
2. Adjustable heart rate strap
3. CR2032 battery
4. Warranty card





REVBOX
Dual Mode Heart Rate Monitor Kit

HEART RATE MONITOR

RUN \ BIKE \ FITNESS

TO SET UP;

Inserting/Replacing the battery:



1. Remove the battery cover using a coin, turning it gently counter clockwise.



2. Insert/replace a CR2032 battery into the sensor with the (+) side facing up.



3. Place the battery cover back on the sensor and turn it clockwise with the coin until it is fully closed.

Please make sure the o-ring sits properly under the cover so no humidity or water can get into the sensor. !

Adjusting the heart rate monitor strap:



4. Adjust the strap length so that it will hold the monitor in place throughout your workout. Snap the sensor onto one side of the strap.



5. Wet both sensor areas on the back of the strap and wrap the strap around your chest, just below your nipples.



6. Once wrapped around you, snap the other end into place. Make sure the Revbox logo is upright when you are wearing the strap.

PAIR WITH RECEIVING DEVICE

Pairing: The heart rate monitor pairs with any receiving device via ANT+/Bluetooth 4.0 dual mode wireless technology. When using the heart rate monitor for the first time it must be paired with your receiving device (Revbox Power App or similar). Please make sure your receiving device meets the following system requirements:

- IOS 5.0 or later
- Android 4.3 or later
- built-in ANT+/Bluetooth 4.0 LE wireless connectivity

Setting: To use the wireless bluetooth connection, turn on the device's Bluetooth setting before pairing before each use. To use the wireless ANT+ connection, please read the App instructions.

After putting on the heart rate monitor according to the instructions, it can be connected to your phone or tablet with the Revbox Power App.

Please follow the instructions from the Revbox Power App.

www.revbox.training

  share your training journey, follow us: @revbox

